



ROUND METAL 2-WAY CEILING LOUDSPEAKER

RCS6FTCX/EN

The RCS range of Co-Axial ceiling loudspeakers have been carefully designed to blend seamlessly into any installation. These units are stylish yet unobtrusive. Made from a pressed steel epoxy coated chassis incorporating a two-way speaker system comprising a bass mid-range driver and separate tweeter. The bass response has been extended to give depth and warmth to both music and vocals. Both drive units have been carefully tailored to give an exceptionally smooth performance. Designed to make installation quick and easy, suitable for use in applications where high quality background music and speech are the primary requirement such as shops, schools, restaurants, hotels, public houses, offices etc.



EN54-24:2008 0359-CPD-0136 TYPE A

● Standard	Compliant to EN54-24 Compliant to BS 5839:8
● Electrical	
Rated power, Watts	10
Tappings 100 volt line, Watts	10/5/2.5/1.25
Transformer Impedance, Ohms 100V	1k/2k/4k/8k
Tappings 70.7 volt line, Watts	5/2.5/1.25/0.625
Driver impedance, Ohms	8
Effective Frequency Range, Hz (BSEN60268-5)	95 - 20,000
S.P.L. @ 4m, 1 watt, dB, 1/3 Octave, 1KHz	62
S.P.L. @ 1m, 1 watt, dB, Test Signal Bandwidth 100Hz-10kHz	92
S.P.L. @ 4m, Full power, dB, 1/3 Octave 1KHz	72
S.P.L. @ 1m, Full power, Test Signal Bandwidth 100Hz-10kHz	102
Dispersion at 1k/2k Hz, Degrees	180/180
● Environmental	
IP Rating	21
Min/Max amb temp	-10°C to 55°C
Relative Humidity	≤95%
● Mechanical	
Dimensions, mm	Ø239x120
Net weight, kg	2.0
Colour (Unless Specified)	White RAL9016
Material	Steel
Mounting	Torsion Springs
Cut-out, mm	Ø200
Safety	Ceramic Block Thermal Fuse





ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com



INSTALLATION GUIDE

RCS6FTCX/EN


EN54-24:2008
0359-CPD-0136
TYPE A

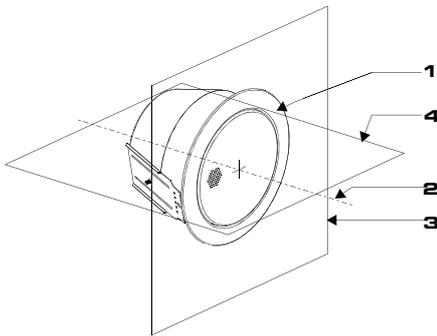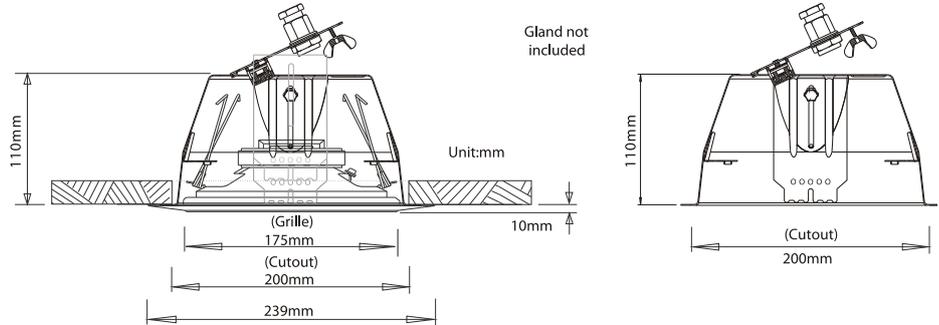


1. Loudspeaker enclosure
2. Reference axis
3. Reference plane
4. Horizontal plane

**With Transformer:
100V/70V line**

	White wire plus tapping				Black
100V	1.25W	2.5W	5W	10W	COM
70V	0.625W	1.25W	2.5W	5W	COM
IMP (Ω)	8K	4K	2K	1K	

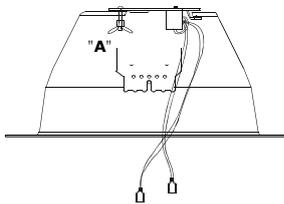


1) Remove the wing nut "A" located on the inside of the fire dome.

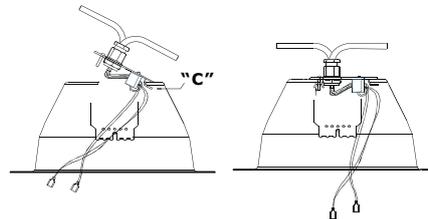

3) Gland the installation cable into the termination plate using suitably rated 20mm glands. 2 gland entries are provided for "loop in" "loop out" termination if required.

4) Terminate the installation cable into the terminal block on the underside of the termination plate "C".

5) Fix the termination plate back into the fire dome and secure using the wing nut previously removed. Do not over tighten to avoid damaging the thread.

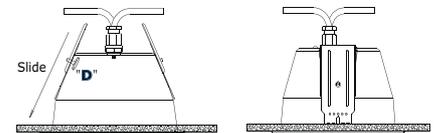


FITTING THE DOME INTO A CEILING

6) Cut a 200mm diameter hole paying attention to ensure that the cut-out is accurately made. As if it is not, the speaker may not fit correctly into the ceiling preventing the speaker from sitting flush to the surface.

7) Loosen the slider knob "D", push the knob & plate upwards to the top of the fire dome and re-tighten the knob to hold the slider in place. Repeat the same process with the other slider.

8) Push the complete fire dome into the cut-out.

9) Once in place loosen the slider knob "D", push the knob & plate downwards until the slider makes firm contact with the ceiling. Tighten the knob to secure it into place. Repeat the same process with the other slider.

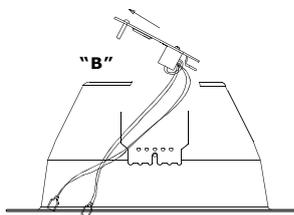


2) Lift the termination plate upwards & away to separate it from the fire dome "B".



INSTALLATION GUIDE


RCS6FTCX/EN

EN54-24:2008
0359-CPD-0136
TYPE A

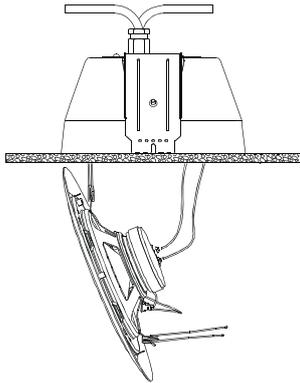

10) The fire dome should be firmly secured into the ceiling.


11) Take the speaker and compress one of the mounting springs & place both ends of the spring into one of the retaining brackets located on the inside wall of the fire dome. Release the spring slowly into the bracket. Once fully released the spring will hold one side of the speaker into the fire dome.

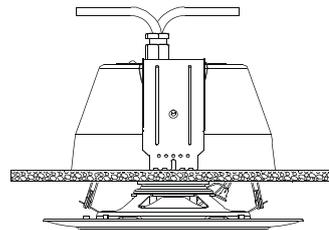

12) With the speaker in this position connect the 3 wires hanging from the termination plate on to the speaker using the spade terminals provided.


13) Fit the second spring mount on the speaker to the remaining bracket on the inside of the fire dome. Finally push the speaker into position.

14) If fitted correctly the speaker should fit flush to the surface.

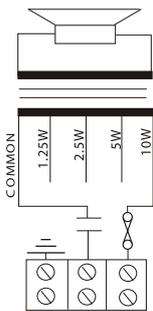

Circuit Diagram

Frequency response

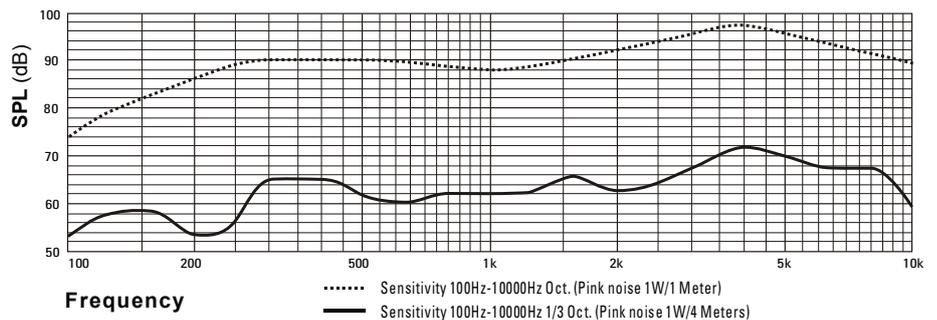

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com

