

HomeSiren User Manual

Updated June 8, 2020



HomeSiren is a wireless home siren with the capacity up to 105 dB. It can be quickly installed and set up, is furnished with a LED (plus allows connecting an external LED), and can operate up to 5 years from a battery.

HomeSiren operates within the Ajax security system, by connecting via the protected Jeweller protocol to the hub. The communication range is up to 2,000 meters if there are no obstacles.

The siren is set up via a mobile application for iOS and Android-based smartphones. The user is notified of all events through push notifications, SMS messages and calls (if activated).




Operates only with Ajax hubs. Connection to ocBridge Plus and uartBridge integration modules is not provided.

The Ajax security system is self-sustaining, but the user can connect it to the central monitoring station of a private security company.



Functional elements

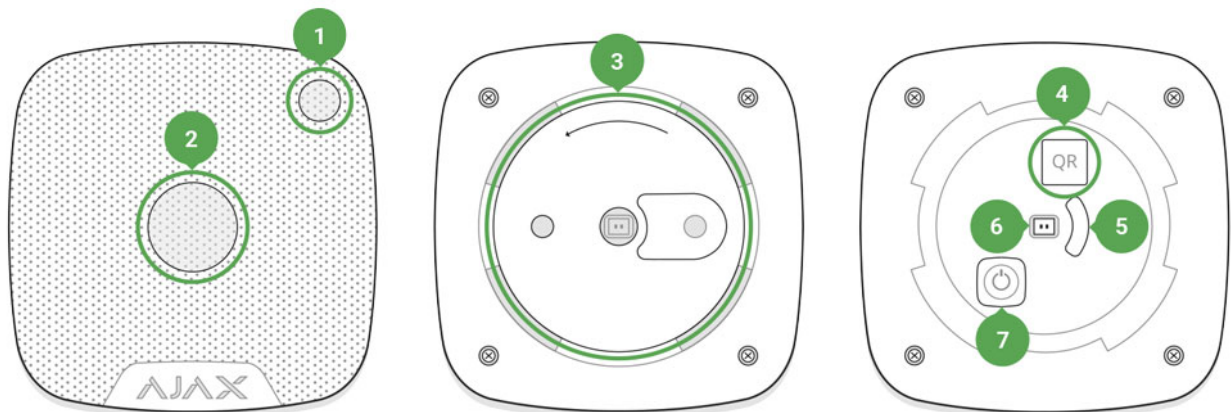

1. Light indicator
2. Siren buzzer covered with a fabric
3. SmartBracket attachment panel (perforated part is required for actuating the tamper in case of any attempt to tear off the siren from the surface)
4. QR code
5. Tamper button
6. Socket for connecting an outside-mounted light indicator
7. On/off button

HomeSiren Operating Principle

The siren significantly improves the efficiency of the security system, being the most operational means of response to the intrusion into a room. With a high probability, its alarm signal will be sufficient to frighten away the intruders.

The device is furnished with a loud buzzer – the sound of the siren can be heard from far. Subject to correct installation, it would be hard to dismount and deactivate the actuated siren: the body is firm, the power supply is autonomous, and the on/off button will be blocked when the security system is set in the guard mode.

Connecting the Siren to the hub



The HomeSiren siren operates only with the Ajax security system. Up to 10 sirens may be connected to the Ajax hub

Before starting connection:

1. Following the hub instruction recommendations, install the [Ajax application](#) on your smartphone. Create an account, add the hub to the application, and create at least one room.
2. Go to the Ajax application.
3. Switch on the hub and check the internet connection (via Ethernet cable and/or GSM network).
4. Ensure that the hub is disarmed and does not start updates by checking its status in the mobile application.



Only users with administrative privileges can add the device to the hub

How to connect the siren to the hub:

1. Select the **Add Device** option in the Ajax application.
2. Name the device, scan/write manually the **QR Code** (located on the body and packaging), and select the location room.



3. Select **Add** – the countdown will begin.

4. Switch on the device (by pressing on/off button for 3 seconds).



For the detection and interfacing to occur, the siren should be located within the coverage area of the wireless network of the hub (at a single protected object). If the device was already assigned to another hub, switch off HomeSiren and then perform the standard adding procedure.

Request for connection to the hub is transmitted for a short time at the time of switching on the device.


If the connection to the Ajax hub failed, the siren will switch off after 6 seconds. You may repeat the connection attempt then. To retry the connection, you do not need to turn off the device.

The siren connected to the hub will appear in the list of devices of the hub in the application. Update of the siren statuses in the list depends on the device inquiry time set in the hub settings, with the default value – 36 seconds.

States

1. Devices


2. HomeSiren

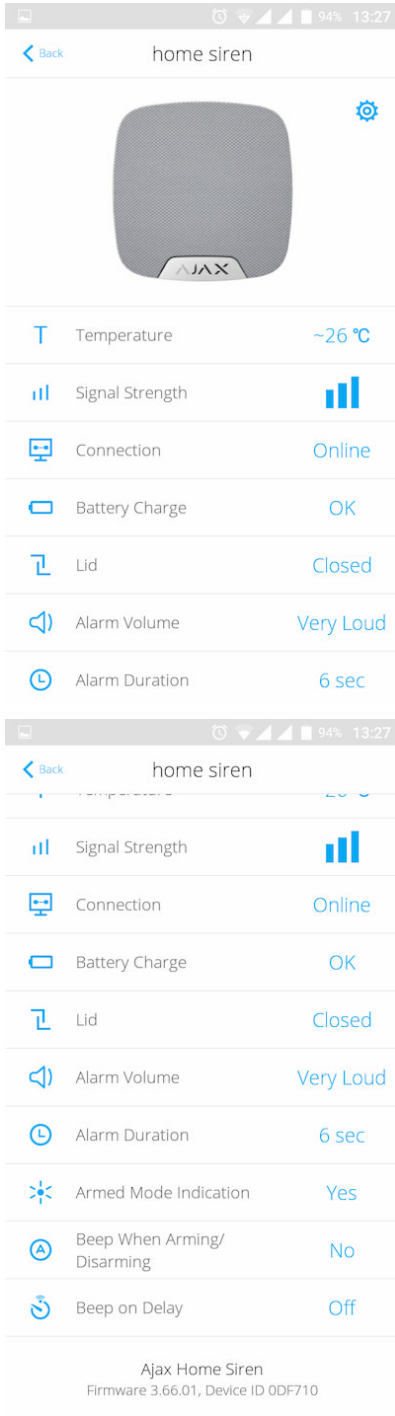



| Parameter | Value |
|-----------------|--|
| Temperature | Temperature of the device. Measured on the processor and changes gradually |
| Signal Strength | Signal strength between the hub and the siren |
| Connection | Connection status between the hub and the |

| | |
|----------------------------|--|
| | siren |
| Battery Charge | Battery level of the device |
| Lid | The tamper mode of the device, which reacts to the detachment of or damage to the body |
| Alarm Volume | Volume level in case of alarm |
| Alarm Duration | Duration of the alarm sound |
| Armed mode indication | If active, the siren LED blinks once every 3 seconds when the security system is armed |
| Beep when arming/disarming | If active, the siren warns about the activation and deactivation of the guard mode by the LED and a short sound signal |
| Beep on delay | If activated, siren will beep delays (available in devices with firmware version 3.50 and later) |
| Firmware | Detector firmware version |
| Device ID | Device identifier |

Setting Up the Detector

1. Devices
2. HomeSiren
3. Settings 

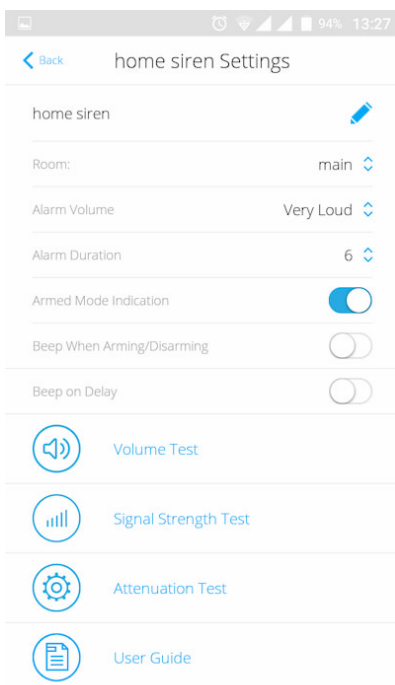

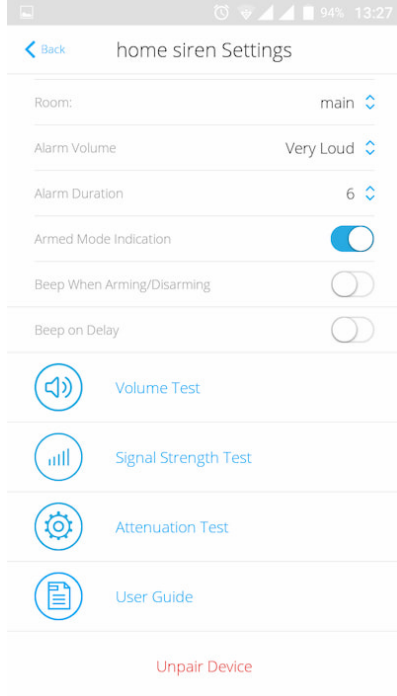

| Setting | Value |
|----------------------------|--|
| First field | Device name, can be edited |
| Room | Selecting the virtual room to which the device is assigned |
| Alarm Volume | Volume level in case of alarm: Very Loud, Loud, Quiet |
| Alarm Duration | The setting determines how long the siren sounds, if the alarm is activated (from 3 to 180 seconds per each actuation) |
| Armed mode indication | If active, the siren LED blinks once every 3 seconds when the security system is armed |
| Beep when arming/disarming | If active, the siren warns about the activation and deactivation of the guard mode by the LED and a short sound signal |
| Beep on delay | If active, siren will beep delays (available in devices with firmware version 3.50 and later) |
| Volume test | Start a volume test of the siren |
| Signal Strength Test | Switches the device to the signal strength test mode |
| Attenuation Test | Switches the siren to the signal fade test mode (available in devices with firmware version 3.50 and later) |
| User Manual | Opens the siren User Manual |
| Unpair Device | Disconnects the siren from the hub and deletes |

Indication

| Event | Indication |
|--|---|
| Alarm | Emits an acoustic signal (the duration depends on the settings) and all LED signaling ceases |
| Switching on the device | LED lights up once |
| Switching off the device | LED will light up for 1 second, then blink three times |
| Registration failed | LED lights up and goes out, then the siren switches off |
| Security system set in the armed mode (if the indication is activated) | Blinks once with a LED and emits a short sound signal |
| Security system is disarmed (if the indication is activated) | Blinks twice with a LED and emits two short sound signals |
| Siren in the armed mode (if the indication is activated) | LED lights up for a short time every 3 seconds |
| Battery low | LED smoothly lights up and goes out when the system is armed or disarmed (if the indication is activated), the tamper is actuated or alarm is given |

Performance testing

The Ajax security system allows conducting tests for checking the functionality of connected devices.

The tests do not start straight away but within a period of 36 seconds when using the standard settings. The test time start depends on the settings of the devices scanning period (the paragraph on “**Jeweller**” settings in hub settings).

Volume Level Test

Signal Strength Test

Attenuation Test

Installing the Siren

Location of the HomeSiren determines its remoteness from the hub and presence of any obstacles between the devices, hindering the radio signal and sound transmission: walls, inserted floors, large-size objects located within the room.



Check the signal level at the installation location.

The communication range is up to 2000 meters if there are no obstacles. Please consider it when choosing an installation place for HomeSiren.

If the signal level is one division, we cannot guarantee stable operation of the security system. Take possible measures to improve the quality of the signal! As a minimum, move the device – even 20 cm shift can significantly improve the quality of reception.

If, after moving, the device still has a low or unstable signal strength, use a [radio signal range extender ReX](#).


Recommended installation height – 2.5 meters and more. This will complicate the access to the device for intruders in case of intrusion.

Siren Installation

Before installing the siren, make sure that you have selected the optimal location and it is in compliance with the conditions contained in this manual!

Installation process

1. Fix the SmartBracket panel on the surface using bundled screws. After selecting other attachment hardware, make sure that they do not damage or deform the panel.

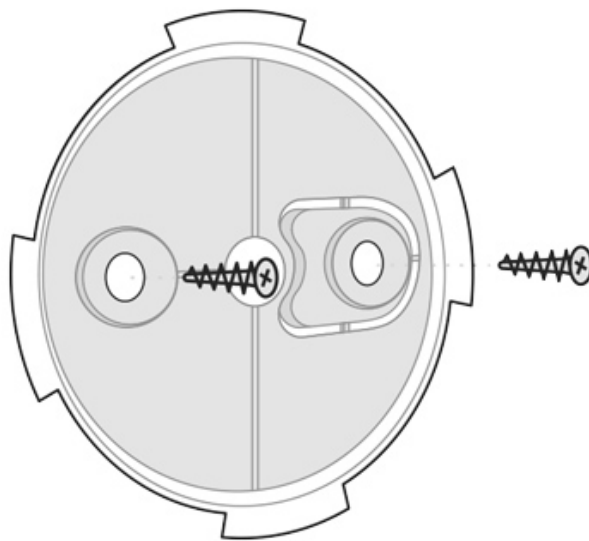

The double-sided adhesive tape may be only used for temporary attachment of the siren. The tape will run dry in course of time, which may result in the falling and damage of the device.

2. Put the siren on the SmartBracket panel and turn it clockwise. When installing in the attachment panel, the tamper will switch and the siren will blink with a LED.

If the light indicator of the siren is not actuated after installation in SmartBracket, check the tamper mode in the Ajax Security System application and then the fixing tightness of the device on the panel.

In case of any attempt to dismount the siren, you will receive the notification.

Do not install the siren:

1. outside the premises (outdoors)
2. in places where the acoustic signal will be attenuated (inside furniture, behind thick curtains, etc.)
3. nearby any metal objects or mirrors causing attenuation and screening of the signal
4. within any premises with the temperature and humidity beyond the range of permissible limits
5. closer than 1 m from the hub.

External LED connection

The outside-mounted LED connected to the HomeSiren is paralleled with the built-in LED of the device and completely repeats its indication.

For connection, use the contact on the rear side of the siren body and observe the polarity during the connection. Black terminal wire – “+” contact.

Outlet power supply: 3 V, 10 mA.

Siren Maintenance and Battery Replacement

Check the operational capability of the HomeSiren on a regular basis.

Clean the siren body from dust, spider web and other contaminations as they appear. Use soft dry napkin suitable for equipment maintenance.

Do not use for cleaning the siren any substances containing alcohol, acetone, gasoline and other active solvents.

The batteries installed in the siren ensure up to 5 years of autonomous operation (with the inquiry frequency by the hub of 1 minute) or at least 6 hours of the buzzer sound. If the battery is discharged, the security system will send respective notices and the LED will smoothly light up and goes out when the armed mode is activated.

Battery Replacement

Tech specs

| | |
|-----------------------------------|--|
| Type of notification | Acoustic and LED |
| Sound notification volume | 81 – 105 dB at a distance of 1 m (adjustable) |
| Operating frequency of the buzzer | 3.4 ± 0.5 kHz |
| Tamper protection | Yes |
| Frequency band | 868.0 – 868.6 MHz or 868.7 – 869.2 MHz depending on the region of sale |
| | |

| | |
|---|--|
| Compatibility | Operates only with Hub , Hub Plus , Hub 2 and ReX |
| Maximum RF output power | Up to 25 mW |
| Radio signal modulation | GFSK |
| Radio signal range | Up to 2,000 m (any obstacles absent) |
| Battery supply | 2 x CR123A, 3 V |
| Battery life | Up to 5 years |
| Socket for connecting an external light indicator | Yes (power supply 3 V, 10 mA) |
| Body protection level | IP50 |
| Operating temperature range | From -10°C to + 40°C |
| Operating humidity | Up to 75% |
| Overall dimensions | 75 x 76 x 27 mm |
| Weight | 97 g |
| Certification | Security Grade 2, Environmental Class II in conformity with the requirements of EN 50131-1, EN 50131-4, EN 50131-5-3 |

Complete Set

1. HomeSiren
2. SmartBracket mounting panel
3. Battery CR123A (pre-installed) – 2 pcs
4. LED connection clamp

5. Installation Kit

6. Quick Start Guide

Warranty

Warranty for the “AJAX SYSTEMS MANUFACTURING” LIMITED LIABILITY COMPANY products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service – in half of the cases, technical issues can be solved remotely!



[The full text of the warranty](#)



[User Agreement](#)

Technical support: support@ajax.systems



Need help?

In this section you'll find detailed manuals and educational videos about all features of Ajax. And in case you need help of a technical specialist, we're available 24/7.

[Send request](#)